


Firmware Update




1. Place firmware file (.bin) in the same folder with the firmware update tool.


** Note: The firmware file name will vary depending on the version we use.

 Firmware Update	1/31/2018 2:20 PM	Application	802 KB
 abc.bin	9/7/2018 2:13 PM	BIN File	126 KB


2. With the Splitter unplugged, connect the Mini-USB cable, Set **Dip Switch pin 1 to ON**, then plug the power.
3. Connect the Splitter to your Windows PC's USB port.
4. Execute the firmware update program.

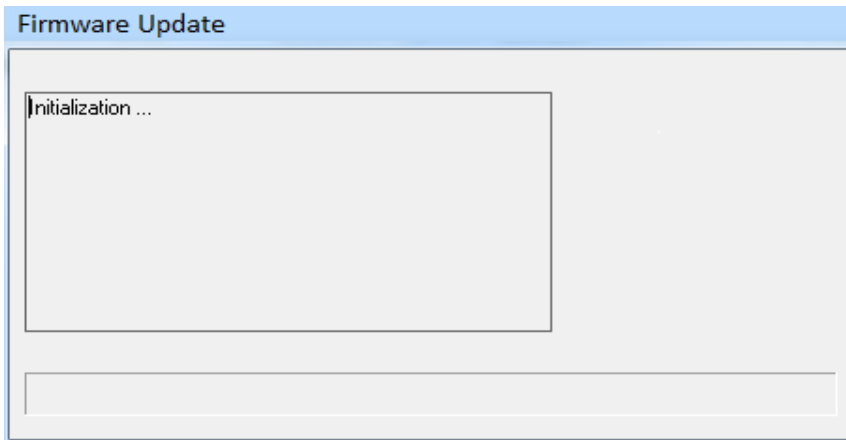

5. The firmware update tool will update the firmware automatically.

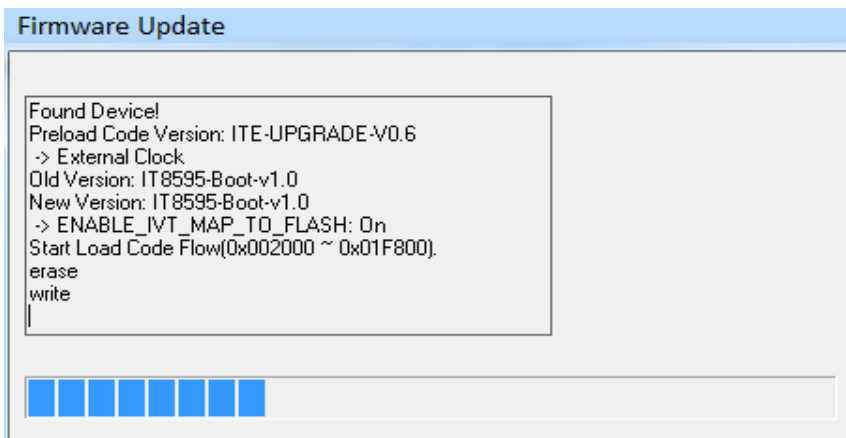

 6. A "Success" window will pop up after the firmware update process completes.





7. Turn Dip Switch Pin 1 to OFF (normal Mode), and then power cycle the device.