


Bluetooth To Rs-232 Quick Installation Guide

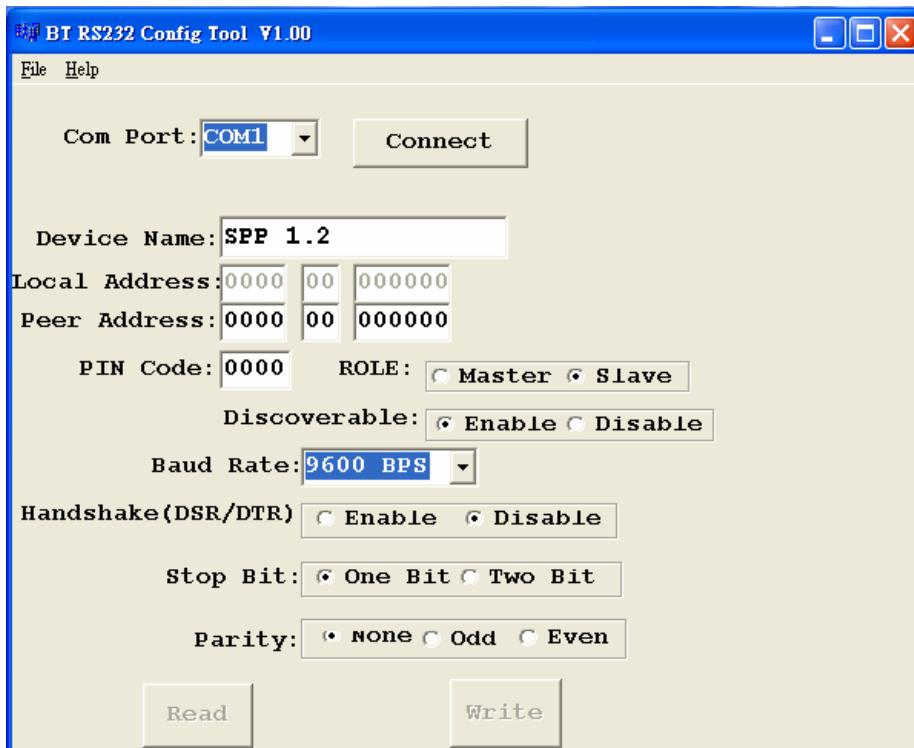

1. The converter plug power adapter and connect to pc com 1 (Com port Selectable).
2. Run the BT1 program (BT RS232 Config Tool V 1.00).
3. Press the right top **connect** button of the BT RS232 Tool and press the near side button of the Bluetooth converter then get into set up mode.
4. When the left under **read** button turn into black color. It becomes set up mode ok.
5. Press the **read** button of the BT Tool. You can read converter default parameters.
6. Change the parameters information then press right under **write** button of the BT Tool. You can save the parameters information into Bluetooth converter.
7. Trun off the power of converter , close the BT Tool program and then turn on the converter again. If pair connect each other ok (the green LED will light all the time) then Bluetooth converter enter transmit data mode.
8. If converter can not pair , Press the near side button of Bluetooth converter for pairing , if pairing ok , the converter get into transmit data mode.
9. After become transmit data mode, the red and green light will light all the time.

DSUB-9 PIN definition

Pin 1> NC	Pin 6> DTR (data output)
Pin 2> TXD (data output)	Pin 7> CTS (data input)
Pin 3> RXD (data input)	Pin 8> RTS (data output)
Pin 4> DSR (data input)	Pin 9> DC 5v power (in)
Pin 5> GND	Default Value : 9600,N,8,1

Remark : RX / TX had been CROSS OVER PIN code :1234