



Addendum

Numeric Keypad

Your keyboard comes with a numeric keypad embedded into the main keypad. The numeric keypad is controlled by turning on and off the Num Lock key. If your keyboard is typing numbers and other characters in place of the letters u, i, o, p, j, k, l and m, use the instructions below to disable the numeric keypad (turn off Num Lock).

1. Press and hold down the **Fn** key (function key).
2. While holding down the **Fn** key, press the **Num Lock** key. (The numeric keypad can be enabled by following the directions again.)

Note: Most system will turn on Num Lock during boot up. In this case follow the directions every time you boot up the computer.