

## Driver Installation

---

Make sure the system is powered off before installing the card.

### Windows Server 2008 R2

1. Install the board and boot up Windows.
2. At the desktop, insert the driver CD.
3. At the CD AutoPlay box, click **Open folder to view files using Windows Explorer**.
3. Double click **Setup**.
4. At Welcome, click **Next**.
5. Select **I accept the terms of the license agreement**, click **Next**.
6. At Ready to Install the Program, click **Install**.
7. Wait while the InstallShield Wizard configures your system. Depending on your system hardware this process may take several minutes to complete.
8. At InstallShield Wizard Complete, click **Finish**.

## Windows Server 2008 (32-/64-bit)

1. Install the board and boot up Windows.
2. At the Found New Hardware window, click **Cancel**.
3. Insert the driver CD.
4. At the CD Autoplay window, double click **Setup**.
5. At Welcome, click **Next**.
6. Select **I accept the terms of the license agreement**, click **Next**.
7. At Ready to Install the Program, click **Install**.
8. Wait while the InstallShield Wizard configures your system. Depending on your system hardware this process may take several minutes to complete.
9. At InstallShield Wizard Complete, click **Finish**.

## Windows Server 2003 (32-/64-bit)

1. Install the board and boot up Windows.
2. At the Found New Hardware Wizard, click **Cancel**.
3. Insert the driver CD. Click **Start, Run**. Type **D:\Setup.exe**, click OK. (Change **D:** to match your CD\DVD-ROM drive letter)
4. At Welcome, click **Next**.
5. Select **I accept the terms of the license agreement**, click **Next**.
6. At Ready to Install the Program, click **Install**.
7. Wait while the InstallShield Wizard configures your system. Depending on your system hardware this process may take several minutes to complete.
8. At InstallShield Wizard Complete, click **Finish**.

## To Verify Successful Installation

1. Go to Device Manager to verify installation.  
For Server 2008 R2: Right click **Computer**, click **Manage**, click **Device Manager**.  
For Server 2008: Right click **Computer**, click **Manage**, double click **Diagnostics**, then click **Device Manager**.  
For Server 2003: Right click **My Computer**, click **Manage**, click **Device Manager**.
2. Double click **Universal Serial Bus controllers**.
3. A **USB 3.0 Host Controller** and a **USB 3.0 Root Hub** should be displayed.