



4-in-1 Connectivity Adapter for Galaxy Tablets

Quick Installation Guide

Introduction

The *4-in-1 Connectivity Adapter for Galaxy Tablets* is a portable and easy way to import images, videos, music and other files onto Galaxy Tablets.

Features and Benefits

- LED activity indicator for Host/SD/MicroSD/Sync/Charging
- Micro USB port for fast synching and charging via AC adapter (AC adapter not included)
- Compatible with Galaxy Tab 7.0/7.0 Plus/7.7/8.9/10.1, Galaxy Tab 2 7.0/10.1 and Windows 8/7/Vista/XP and Mac OS 10.5 and above computers

Package Contents

- *4-in-1 Connectivity Adapter for Galaxy Tablets*
- Micro-USB cable
- Quick installation guide

Layout

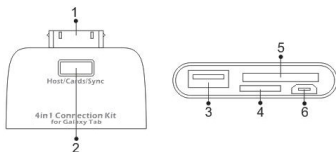 


Figure 1: Layout

1. **30-pin Connector:** Connects to your Galaxy Tablet's 30-pin connector
2. **LED Indicator:**
 - Green: The *Connectivity Adapter* is active
 - Red: Indicates SD or MicroSD inserted
 - Blue: Indicates Micro USB connection
3. **USB Host:** Connect digital camera, USB drive, keyboard or mouse
4. **MicroSD Card Slot:** Connects to your MicroSD card
5. **SD Card Slot:** Connects to your SD card
6. **Micro USB:** Sync with PC or Charge using your original power adapter

Warning: The *4-in-1 Connectivity Adapter for Galaxy Tablets* only supports **ONE** device connection at any one time. Inserting more than one device is not supported.

Using USB Drive or Digital Camera

1. Connect the *4-in-1 Connectivity Adapter for Galaxy Tablets' 30-pin Connector* to the Galaxy Tab's **30-pin Connector**. The green LED will light up.
2. Connect your USB drive or Digital Camera to the USB Type-A connector.
3. The Galaxy Tab will recognize the USB drive or the Digital Camera. It will read the picture and video files automatically.
4. The files will be located in **/My files/.../UsbDriveA**. **Note:** The path may vary according to the OS version installed.
5. Select the file(s) that you want. Either click on the filename to view or select the specific files and then choose the desired operation (**Send Via, Copy, Cut, Delete, or Rename/Details**).

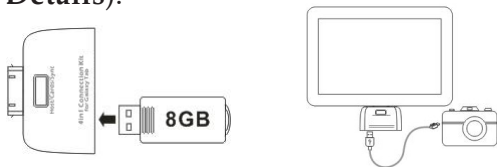 


Figure 2: Connecting USB Drive or Digital Camera

Using SD or MicroSD Card

1. Connect the *4-in-1 Connectivity Adapter for Galaxy Tablets' 30-pin Connector* to the Galaxy Tab's **30-pin Connector**. The green LED will light up.
2. **SD:** Insert memory card with the gold pins facing down into the SD slot. The green LED will turn to red.
MicroSD: Insert memory card with the gold pins facing up into the MicroSD slot. The green LED will turn to red.
3. The Galaxy Tab will recognize the memory card. It will read the picture and video files automatically.
4. The files will be located in **/My files/.../UsbDriveA**. **Note:** The path may vary according to the OS version installed.
5. Select the file(s) that you want. Either click on the filename to view or select the specific files and then choose the desired operation (**Send Via, Copy, Cut, Delete, or Rename/Details**).

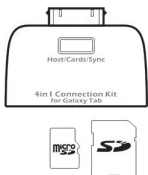 


Figure 3: Connecting SD and MicroSD

Charging using an AC Adapter

1. Connect the Micro-USB cable (included) between the Micro-USB port of the *4-in-1 Connectivity Adapter for Galaxy Tablets* and your AC adapter.
2. Connect the *4-in-1 Connectivity Adapter for Galaxy Tablets' 30-pin Connector* to the Galaxy Tab's **30-pin Connector**. The green LED will light up.
3. Plug the AC adapter to a reliable power source. The red LED will turn to blue and the Galaxy Tablet will charge automatically.

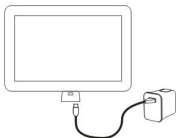 


Figure 4: AC Adapter Charging

Note: The *4-in-1 Connectivity Adapter* will not read a device while charging.

Warning: The *4-in-1 Connectivity Adapter for Galaxy Tablets* only supports **ONE** device connection at any one time. Inserting more than one device is not supported.

Using a USB Keyboard and Mouse

1. Connect the *4-in-1 Connectivity Adapter for Galaxy Tablets'* **30-pin Connector** to the Galaxy Tab's **30-pin Connector**. The green LED will light up.
2. Connect the USB keyboard or mouse to the USB Type-A connector of the *4-in-1 Connectivity Adapter for Galaxy Tablets*.
3. Your keyboard or mouse is ready to use.

Technical Support and Warranty

SIIG offers a 1-year manufacturer warranty with this product. This warranty covers the original purchaser and guarantees the product to be free of any defects in materials or workmanship for one (1) year from the date of purchase of the product. Please see our web site for more warranty details. If you encounter any problems with this product, please follow the procedures below. If your purchase has passed the store's return policy period, please follow the steps below to have the product repaired or replaced.

Step 1: Submit your RMA request.

Go to www.siig.com, click **Support**, then **REQUEST A PRODUCT REPLACEMENT** to submit a request to [SIIG RMA](#) or fax a request to 510-657-5962. Your RMA request will be processed, if the product is determined to be defective, an RMA number will be issued.

Step 2: After obtaining an RMA number, ship the product. Properly pack the product for shipping. All accessories that came with the original package must be included. Clearly write your RMA number on the top of the returned package. SIIG will refuse to accept any shipping package, and will not be responsible for a product returned without an RMA number posted on the outside of the shipping carton. You are responsible for the cost of shipping to SIIG. Ship the product to the following address:

SIIG, Inc. 6078 Stewart Avenue Fremont, CA 94538-3152, USA

RMA #: _____

SIIG will ship the repaired or replaced product via Ground in the U.S. and International Economy outside of the U.S. at no cost to the customer.

PRODUCT NAME

4-in-1 Connectivity Adapter for Galaxy Tablets

FCC RULES: TESTED TO COMPLY WITH FCC PART 15, CLASS B
OPERATING ENVIRONMENT: FOR HOME OR OFFICE USE

FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE PARTY RESPONSIBLE FOR PRODUCT COMPLIANCE

SIIG, Inc.
6078 Stewart Avenue
Fremont, CA 94538-3152, USA
Phone: 510-657-8688

4-in-1 Connectivity Adapter for Galaxy Tablets is a trademark of SIIG, Inc. SIIG and the SIIG logo are registered trademarks of SIIG, Inc. All other names used in this publication are for identification only and may be trademarks of their respective owners.

