# **Dear Valued Customer**

(Just WANTED YOU TO KNOW)

# WE REALLY APPRECIATE YOUR PURCHASE

# Support

For more info or tech support <a href="http://www.siig.com/support">http://www.siig.com/support</a>

#### **Features**


- Supports HDMI 1.3, HDCP 1.4
- Supports 1080p@60Hz
- Extend over a Cat5e/6 cable up to 40m
- Support IR frequence 20-60kHz
- Support EDID setting function

## **Package contents**

- HDMI HDbitT Extender TX
- HDMI HDbitT Extender RX x4
- Power adapter DC 5V/3A
- Power adapter DC 5V/1A x4
- IR Blaster cable
- IR Receiver cable x4
- Screw kit
- Ouick Start Guide

### Layout

#### Transmitter

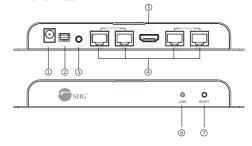


- Power Jack: Connect with DC 5V/3A power adapter
- EDID switch: Set the EDID information for source device
- 3. IR OUT: Connect with IR Blaster cable
- 4. RJ-45: Link to the RX via a Cat5e/6 cable
- 5. HDMI IN: Connect with HDMI source
- **6. LINK LED:** Turns red when powered. Turns blue when an HDMI signal detected
- 7. Reset: Press to reset the HDMI extender when it doesn't work properly

#### **EDID**

"1" represents Switch UP
"0" represents Switch down


SW1	SW2	SW3	EDID Mode
0	0	0	720P@50Hz 2CH
1	0	0	720P@50Hz 7.1CH
0	1	0	1080i@60Hz 2CH
1	1	0	1080i@60Hz 7.1CH
0	0	1	1080p@60Hz 2CH
1	0	1	1080p@60Hz 7.1CH
1	1	1	Default 720P@50Hz 2CH

#### Receiver

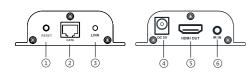

- Reset: Press to reset the HDMI extender when it doesn't work properly
- 2. RJ45: Link to the TX via a Cat5e/6 cable
- **3. LINK LED:**Blinks when powered. On when the signal connected
- **4. Power Jack:** Connect with DC 5V/1A power adapter
- 5. HDMI Out: Connect with HDMI display
- 6. IR IN: Connect with IR Receiver cable

# **Application**

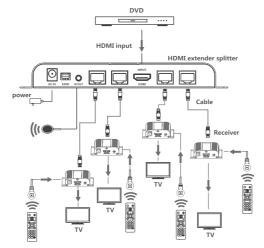




# 4-Port HDMI Splitter over Cat6 Extender with IR - 40M

# **Quick Start Guide**



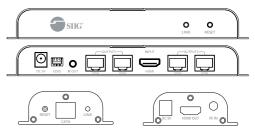



04-1160A

P/N: CE-H23U11-S1