USB to Serial
Quick Installation Guide

System Requirements

- USB equipped computer with one available USB port
- Windows 98/98SE/ME/2000/XP
- MAC OS 8.6/9.x

Package Contents

- One *USB to Serial* adapter
- One Driver CD
- This quick installation guide

Serial # Sticker

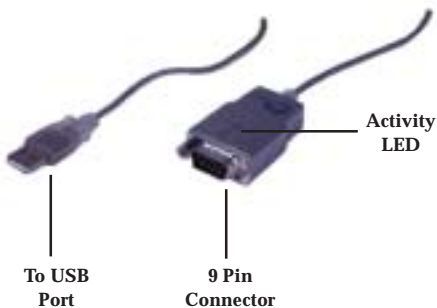For future product return or exchange, this serial # is required. Please keep it for your reference.

Layout

Figure 1. USB to Serial

Software Installation

Windows Driver Installation

For Windows 98/98SE:

1. Boot up to Windows and plug in the *USB to Serial* adapter.
2. At the **Add New Hardware Wizard**, click **Next**.
3. Select **Search for the best driver for your device. (Recommended)** and click **Next**.

4. Insert the driver CD, check **Specify a location**, uncheck the other boxes, type in **D:\Windows**, then click **Next**. (Change **D:** to match your CD-ROM drive letter)

5. Click **Next** and **Finish**.

6. Restart Windows to complete the installation.

For Windows ME:

1. Boot up to Windows and plug in the *USB to Serial* adapter.

2. Insert the driver CD. At the **Add New Hardware Wizard**, click **Automatic Search for a better driver**, then click **Next**.

3. Click **Finish**.

4. Restart Windows to complete the installation.

For Windows 2000:

1. Boot up to Windows and plug in the *USB to Serial* adapter.

2. At the **Found New Hardware Wizard**, click **Next**.

3. Select **Search for a suitable driver for my device (Recommended)** and click **Next**.

4. Insert the driver CD, check **CD-ROM drives**, uncheck the other boxes, then click **Next**.

5. Click **Next** and **Finish**.

6. Repeat steps **2**-**5**.

7. Restart Windows to complete the installation.

For Windows XP:

1. Boot up to Windows and plug in the *USB to Serial* adapter.

2. Insert the driver CD. At the **Found New Hardware Wizard**, select **Install the software automatically (Recommended)**, then click **Next**.

3. Click **Continue anyway**. *Our driver has been thoroughly tested in Windows for stability.*

4. Click **Finish**.

5. Repeat steps **2**-**4**.

6. Restart Windows to complete the installation.

Verify Windows Installation

1. Check **Device Manager** to verify successful driver installation.

   Windows 98/98SE/ME: From the main desktop, right click **My Computer**, then click **Properties**. Click **Device Manager** tab.

   Windows 2000/XP: Right click **My Computer**, then click **Manage**. Click **Device Manager**.

2. Double click **Ports (COM & LPT)** option and a **USB to Serial (RS232)....** should be displayed.

MAC OS 8.6/9.x Driver Installation

1. Turn on your computer and insert the driver CD.

2. Double click the **USBtoSerial** drive icon on the desktop.

3. Double click **MAC** folder and two files appear. Copy these two files into the **Extensions** folder of your system hard drive.

   Note: Extensions folder is located within **MAC HD\System Folder.**

4. Restart Windows to complete the installation.

Verify Mac OS Installation

1. Check **Apple System Profiler** to verify successful installation.

2. Click the **Apple** icon on the desktop, then click **Apple System Profiler**.

3. Click **Devices and Volumes** tab and the **USB to Serial Converter** should be listed.

Technical Support

QUESTIONS? SIIG's **Online Support** has the answers! Simply visit our web site at *www.siig.com* and click **Support**. Our online support database is updated daily with new drivers and solutions. The answers to your problems could be just a few clicks away.

UK Warranty & Support Information

The 5 year warranty supplied with this product is offered by SIIG, Inc. If you should happen to encounter any problems with this product, please follow the procedures below.

1. If it is within the first year of purchase, please return product to the outlet you purchased from.
2. If your product is between 2 and 5 years old from date of purchase, please contact SIIG using the contact details below.

For UK Technical Support

Telephone:	+44 (0) 1255 687503
Fax:	+44 (0) 1255 687501
Email:	support@siig.uk.com
Website:	http://www.siig.uk.com

PRODUCT NAME   **MODEL NUMBER**

USB to Serial   US2308

FCC RULES: TESTED TO COMPLY WITH FCC PART 15, CLASS B OPERATING ENVIRONMENT: FOR HOME OR OFFICE USE

FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE PARTY RESPONSIBLE FOR
PRODUCT COMPLIANCE
SIIG, Inc.
6078 Stewart Ave.
Fremont, CA 94538-3152