



# MobileCam/Light Pro

## Quick Installation Guide

### System Requirements


- Pentium-class notebook or desktop computer with an available USB port
- Windows 98SE/ME/2000/XP

### Package Contents

- One *MobileCam/Light Pro*
- One Driver/Utility CD
- This quick installation guide

### Serial # Sticker

For future product return or exchange, this serial # is required. Please keep it for your reference.



## Layout

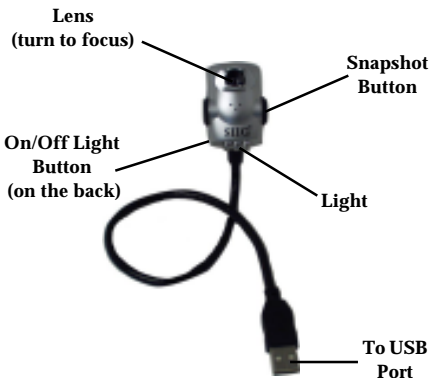


Figure 1. MobileCam/Light Pro Layout

## Software Installation

**Important:** Make sure the driver is installed before connecting the *MobileCam/Light Pro* to the USB port. If prompted for Windows Installation CD during installation, please insert it and follow the on-screen instructions.

## Windows Driver Installation

1. Boot up to Windows and insert the driver CD.
2. **Autorun** will start installation. If **Autorun** does not start, click **Start, Run**. Type in **D:\Autorun.exe**, then click **OK**. (Change **D:** to match your CD-ROM drive letter)
3. In the **MobileCam Pro** window, click the **up arrow** to start driver installation, then follow the on-screen instructions.

### For Windows 98SE/ME:

Continue to step #4.

### For Windows 2000:

At the **Digital Signature Not Found** window, click **Yes** two times, then click **Finish**. *Our driver has been thoroughly tested in Windows for stability.*

### For Windows XP:

At the **Software Installation** window, click **Continue Anyway**, then click **Finish**. *Our driver has been thoroughly tested in Windows for stability.*

4. Restart Windows to complete driver installation.

## Ulead Photo Explorer 7.0 SE Platinum

Ulead Photo Explorer combines easy to use tools for acquiring, viewing, organizing, adjusting, and sharing digital images. For more detail about Ulead Photo Explorer, please refer to the pdf manual located in **CD-ROM:\Ulead Photo Explorer7.0SE Platinum \Document\Manual** folder of the software CD.

Please note that this utility is **optional** and not needed for the *MobileCam/Light Pro* to operate.

1. Boot up to Windows and insert the driver CD.
2. **Autorun** will start installation. If **Autorun** does not start, click **Start, Run**. Type in **D:\Autorun.exe**, then click **OK**. (Change **D:** to match your CD-ROM drive letter)
3. In the **MobileCam Pro** window, click the **down arrow**, click **Install Ulead Photo Explorer 7.0 SE Platinum**, then follow the on-screen instructions.
4. When prompted, enter the Ulead serial number found on the driver CD sleeve to complete the installation.

## **Connecting the *MobileCam/Light Pro***

**Important:** Make sure the driver is installed before connecting the *MobileCam/Light Pro* to your system.

**Note:** After the *MobileCam/Light Pro* has been connected, turn the lens to improve focus if needed.

### **Windows 98SE:**

1. Plug the *MobileCam/Light Pro* into an available USB port.
2. At the **Insert Disk** box, insert your Windows 98SE installation CD-ROM, then click **OK**.
3. If prompted, click **Yes** to keep the newer files.
4. Restart Windows to complete the installation.

### **Windows ME:**

Windows ME will automatically detect and install the correct driver for the *MobileCam*. Restart Windows if prompted.

**Note:** If prompted, click **Yes** to keep the newer files.

### **Windows 2000:**

1. Plug the *MobileCam/Light Pro* into an available USB port.

2. At the **Digital Signature Not Found** window, click **Yes** two times. *Our driver has been thoroughly tested in Windows for stability.*
3. Click **Finish**.
4. The camera is now ready.

### **Windows XP:**

1. Plug the *MobileCam/Light Pro* into an available USB port.
2. At the **Found New Hardware Wizard**, select **Install the software automatically (Recommended)**, then click **Next**.
3. At the **Hardware Installation** window, click **Continue Anyway**. *Our driver has been thoroughly tested in Windows for stability.*
4. Click **Finish** then **Yes** to restart Windows.
5. The camera is now ready.

## To verify successful installation:

1. Check **Device Manager** to verify successful driver installation.

Windows 98SE/ME: From the main desktop, right click **My Computer**, then click **Properties**. Click **Device Manager** tab.

Windows 2000/XP: Right click **My Computer**, then click **Manage**. Click **Device Manager**.

2. Double click **Imaging Device(s)** option and **MobileCam Pro** should be displayed.

## MobileCam/Light Pro Buttons

**Note:** To view the exact location of each button, see figure 1 on page 2.

1. Press the button on the back of the *MobileCam/Light Pro* to activate/deactivate the light.
2. Press the button on the side of the *MobileCam/Light Pro* to take a snapshot.

## **AMCAP Capturing**

---

Use this utility to easily capture video and snapshots.

**Note:** Turn the lens to improve focus if needed. (See figure 1 on page 2)

### **Video capture:**

#### **Windows 98SE/ME/2000:**

1. Click **Start, Programs, MobileCam Pro, then AMCAP.**

**Important:** On your very **first time** capturing video, click **File**, select **Set capture file...**, type in a file name with **.avi** extension, click **Open**, then click **OK**. An example for this file name is **test.avi**. You only have to do this **once**.

2. Wait for an image to appear, click **Capture**, then **Start Capture**.
3. Click **OK**.
4. To end capture, click **Capture**, then **Stop Capture**.
5. To save the captured video click **File, Save Captured Video As...**, type in a name, then click **Open**.

## Windows XP:

1. Click the **Snapshot** button to start AMCAP.  
**Important:** On your very **first time** capturing video, click **File**, select **Set capture file...**, type in a file name with **.avi** extension, click **Open**, then click **OK**. An example for this file name is **test.avi**. You only have to do this **once**.
2. Wait for an image to appear, click **Capture**, then **Start Capture**.
3. Click **OK**.
4. To end capture, click **Capture**, then **Stop Capture**.
5. To save the captured video click **File**, **Save Captured Video As...**, type in a name, then click **Open**.

## Snapshot capture:

### Windows 98SE/ME/2000:

1. Click **Start**, **Programs**, **MobileCam Pro**, then **AMCAP**.
2. Wait for an image to appear then click the **Snapshot** button.
3. In the **StillCap** window, click **File**, **Save As**, type in a name, then click **Save**.

## Windows XP:

1. Click the **Snapshot** button to start AMCAP.
2. Wait for an image to appear, then click the **Snapshot** button.
3. In the **VMCap** window, click **File, Save As**, type in a name, then click **Save**.

## Sound

The **MobileCam/Light Pro** comes with a built-in microphone. If you need this function, use the directions in this section to configure the microphone's recording level.

## Windows 98SE:

1. In **Control Panel**, double click **Multimedia**, then click **Audio** tab.
2. In **Recording**, select **PC Camera...** as the preferred device.
3. Click the **Microphone** icon, move the slider bar up to increase the recording level.
4. Close the open windows when finished.

## Windows ME/2000:

1. In **Control Panel**, double click **Sounds and Multimedia**, then click **Audio** tab.

2. In **Recording**, select **PC Camera...** as the preferred device.
3. Click **Volume**, move the slider bar up to increase the recording level.
4. Close the open windows when finished.

### **Windows XP:**

1. In **Control Panel**, double click **Sounds and Audio Devices**, then click **Audio** tab.
2. In **Sound recording**, select **PC Camera** as the preferred device.
3. Click **Volume**, move the slider bar up to increase the recording level.
4. Close the open windows when finished.

## Technical Support

---

**QUESTIONS?** SIIG's **Online Support** has the answers! Simply visit our web site at **[www.siig.com](http://www.siig.com)** and click on **Support**. Our online support database is updated daily with new drivers and solutions. The answers to your problems could be just a few clicks away.

<b>PRODUCT NAME</b>	<b>MODEL NUMBER</b>
MobileCam/Light Pro	CE07xx

FCC RULES: TESTED TO COMPLY WITH FCC PART 15,  
CLASS B OPERATING ENVIRONMENT: FOR HOME OR  
OFFICE USE

### **FCC COMPLIANCE STATEMENT:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **THE PARTY RESPONSIBLE FOR PRODUCT COMPLIANCE**

SIIG, Inc.

6078 Stewart Ave.

Fremont, CA 94538-3152

MobileCam/Light Pro is a trademark of SIIG, Inc. All other names used in this publication are for identification only and may be trademarks of their respective companies.