



DP CyberParallel Dual Quick Installation Guide

Introduction

The *DP CyberParallel Dual* is a high-speed parallel I/O card for parallel device connections. It provides 2 ECP/EPP parallel ports which support data transfer rates up to 1.5 MB/s.

Features and Benefits

- Compliant with PCI Local Bus Specification, Revision 2.3
- Can be installed in 32-/64-bit, 3.3v/5v PCI and PCI-X slots
- Full support for Windows and DOS based software
- PCI IRQ sharing feature reduces IRQ conflicts
- Dual Profile design to work with standard height and low profile chassis
- Supports ECP, EPP, PS2 and SPP parallel port modes
- Works with various types of parallel port devices including printers, removable drives, scanners, CD-R/RWs, and more

System Requirements

- Pentium or equivalent computer with an available PCI slot
- Windows® 8 (32-/64-bit) / 7 (32-/64-bit) / Vista (32-/64-bit) / XP (32-/64-bit) / Server 2003 & 2008 (32-/64-bit) / Server 2008 R2 / 2000 / ME / 98SE / 98 / 95, DOS

Package Contents

- *DP CyberParallel Dual*
- DB25 parallel port cable (for 2nd parallel port)
- 2x spare low profile brackets
- Driver CD
- Quick installation guide

Board Layout

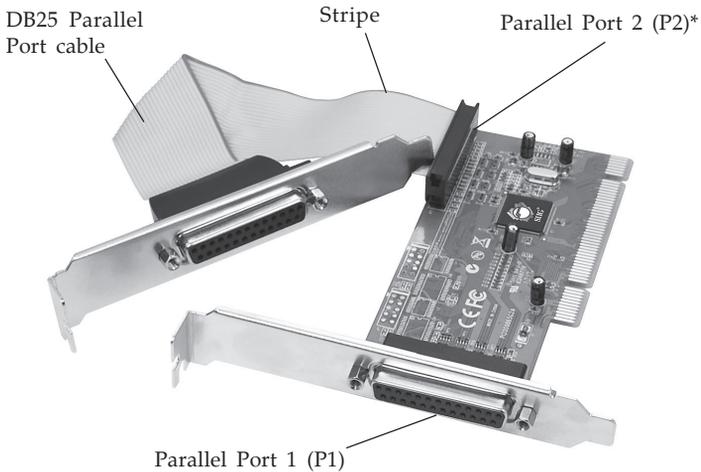


Figure 1. Cyber Parallel Dual

***Note:** When connecting the **DB25 Parallel Port cable** to **Parallel Port 2 (P2)**, position the ribbon cable so the stripe is on the side farthest from the slot bracket, see **Figure 1**.

Hardware Installation

Note: For low profile systems, replace the currently mounted bracket with the included low profile bracket. General instructions for installing the card are provided below. Since the design of computer cases and motherboards vary, refer to your computer's reference manual for further information, if needed.

Static Electricity Discharge may permanently damage your system. Discharge any static electricity build up in your body by touching your computer case for a few seconds. Avoid any contact with internal parts and handle cards only by their external edges.

1. Turn OFF the power to your computer.
2. Unplug the power cord and remove the computer cover.
3. Remove the slot bracket from an available PCI slot.
4. If you need the second parallel port, connect the **DB25 Parallel Port cable** now and remove another slot bracket cover from an available PCI slot. See **Figure 1** on page 2 for more details. Skip this step if you need only one parallel port.
5. Carefully align the card to the selected PCI slot, push the board down firmly, but gently, until it is well seated.
6. Replace the slot bracket holding screw to secure the card.
7. Mount the second parallel port and secure it with the slot bracket holding screw. Skip this step if you need only one parallel port.
8. Replace the computer cover and reconnect the power cord.

Software Installation

This section provides the steps on how to install the *DP CyberParallel Dual* drivers. Please make sure the board is installed before proceeding with the driver installation.

Windows 8 (32-/64-bit) / 7 (32-/64-bit) / Server 2008 R2

1. Install the board and boot up Windows.
2. Right click **Computer**, click **Manage**, click **Device Manager**.
3. Insert the driver CD. Close the **AutoPlay** box if prompted.
4. Right click **PCI Parallel Port** listed first, click **Update Driver Software**.
5. Click **Browse my computer for updated software**.
For 32-bit: Type **D:\32bit**, click **Next**. (Change **D:** to match your CD-ROM drive letter)
For 64-bit / 2008 R2: Type **D:\64bit**, click **Next**.
Change **D:** to match your CD-ROM drive letter)
6. At **Windows has successfully updated your driver software**, click **Close**.
7. Go back to Device Manager, right click **PCI Parallel Port**, then click **Update Driver Software**.
8. Repeat steps 5 & 6, then restart the computer to complete the installation.

Windows Vista (32-/64-bit) / Server 2008 (32-/64-bit)

1. At the **Found New Hardware** window, click **Locate and install driver software (recommended)**, then click **Continue**.

2. Click **Don't search online**. Skip this step if not prompted.
3. Click **I don't have the disc. Show me other options**.
4. Click **Browse my computer for driver software**.
5. Insert the driver CD. Close the **AutoPlay** box if prompted.
6. *For 32-bit:* Type **D:\32bit**, click **Next**. (Change **D:** to match your CD-ROM drive letter)
For 64-bit: Type **D:\64bit**, click **Next**. Change **D:** to match your CD-ROM drive letter)
7. At **The software for this device has been successfully installed**, click **Close**.
8. Restart the computer to complete the installation.

Windows XP (32-/64-bit) / Server 2003 (32-/64-bit)

1. At the **Found New Hardware Wizard**.
2. Select **No, not this time**, click **Next**. Skip this step if not prompted.
3. Select **Install from a list or specific location (Advanced)**, then click **Next**.
4. Insert the driver CD, check **Include this location in the search**, uncheck the other box.
For 32-bit: Type **D:\32bit**, click **Next**. (Change **D:** to match your CD-ROM drive letter)
For 64-bit: Type **D:\64bit**, click **Next**. Change **D:** to match your CD-ROM drive letter)
5. Click **Finish**, then restart the computer to complete the installation.

Windows 2000

1. At the **Found New Hardware Wizard**, click **Next**.
2. Select **Search for a suitable driver for my device (recommended)**, then click **Next**.
3. Select **Specify the location**, uncheck the other boxes, then click **Next**.
4. Insert the driver CD, type in **D:\2000**, then click **OK**. (Change **D:** to match your CD-ROM drive letter)
5. Click **Next**, then **Finish** to complete the installation.

Windows ME

1. At the **Add New Hardware Wizard**, choose **Specify the location of the driver (Advanced)**, then click **Next**.
2. Check **Specify a location**, uncheck the other box, insert the driver CD, type in **D:\ME**, then click **Next**. (Change **D:** to match your CD-ROM drive letter)
3. Click **Next**, then **Finish**.
4. Click **Yes** to restart Windows.
5. When Windows resumes the driver will install automatically.
6. Click **Yes** to restart to complete the installation.

Windows 98SE / 98

1. At the **Add New Hardware Wizard**, click **Next**.
2. Select **Search for the best driver for your device (Recommended)**, then click **Next**.
3. Select **Specify a location**, uncheck the other boxes, insert the driver CD, type in **D:\ME**, then click **Next**. (Change **D:** to match your CD-ROM drive letter)
4. Click **Next**, then click **Finish**.
5. Click **Yes** to restart the computer.

6. When Windows resumes the driver will install automatically.
7. Click **Yes** to restart to complete the installation.

Windows 95

1. At the **Update Device Driver Wizard**, click **Next**.
2. Insert the driver CD. Click **Other Locations**.
3. Type **D:\ME**, click **OK**, then click **Finish**. (Change **D:** to match your CD-ROM drive letter)
4. At the **Insert Disk** window, click **OK**. When the **Copying Files** dialog box appears, type in **D:\ME**, then click **OK**. (Change **D:** to match your CD-ROM drive letter)
5. Click **Yes** to restart Windows.
6. When Windows resumes the driver will install automatically.
7. Click **Yes** to restart to complete the installation.

DOS

1. Insert the driver CD. From the **C:\>** prompt, type **copy D:\dos*.***, and press **Enter**. (Change **D:** to match your CD-ROM drive letter)
2. Type **edit autoexec.bat**, and press **Enter**.
3. Add **C:\Gemdosin.exe -a -r** at the bottom of the **Autoexec.bat** file.
4. Go to **File**, save the changes and exit.
5. Restart your system for the new setup to take effect.

To Verify Windows Installation

Windows 8 (32-/64-bit) / 7 (32-/64-bit) / Windows XP (32-/64-bit) / Server 2003 (32-/64-bit) / 2000

1. Right click **Computer** or **My Computer**, click **Manage**, then click **Device Manger**.
2. Double click **Ports (COM & LPT)**, two **PCI... Parallel Port...** should be listed.

Windows Vista (32-/64-bit)

1. Right click **Computer**, click **Manage**, click **Continue**, then click **Device Manger**.
2. Double click **Ports (COM & LPT)**, two **PCI... Parallel Port...** should be listed.

Server 2008 (32-/64-bit) / Server 2008 R2

1. Right click **Computer**, click **Manage**, double click **Diagnostics**, click **Device Manager**.
2. Double click **Ports (COM & LPT)**, two **PCI... Parallel Port...** should be listed.

Windows ME / 98SE / 98 / 95

1. Right click **My Computer**, click **Properties**, click **Device Manager**.
2. Double click **Ports (COM & LPT)**, two **M65-PCI... Parallel Ports...** should be listed.

Blank Page

Blank Page

Technical Support and Warranty

QUESTIONS? SIIG's **Online Support** has answers! Simply visit our web site at www.siig.com and click **Support**. Our online support database is updated daily with new drivers and solutions. Answers to your questions could be just a few clicks away. You can also submit questions online and a technical support analyst will promptly respond.

SIIG offers a lifetime manufacturer warranty with this product. This warranty covers the original purchaser and guarantees the product to be free of any defects in materials or workmanship for the life of the product.

SIIG will, at our discretion, repair or replace (with an identical product or product having similar features and functionality) the product if defective in materials or workmanship. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Please see our web site for more warranty details.

If you encounter any problems with this product, please follow the procedures below.

A) If it is within the store's return policy period, please return the product to the store where you purchased it.

B) If your purchase has passed the store's return policy period, please follow these steps to have the product repaired or replaced.

Step 1: Submit your RMA request. Go to www.siig.com, click **Support**, then **Request A Product Replacement** to submit a request to **SIIG RMA** or fax a request to 510-657-5962. Your RMA request will be processed, if the product is determined to be defective, an RMA number will be issued.

Step 2: After obtaining an RMA number, ship the product.

- Properly pack the product for shipping. All software, cable(s) and any other accessories that came with the original package must be included.
- Clearly write your RMA number on the top of the returned package. SIIG will refuse to accept any shipping package, and will not be responsible for a product returned without an RMA number posted on the outside of the shipping carton.
- You are responsible for the cost of shipping to SIIG. Ship the product to the following address:

SIIG, Inc.
6078 Stewart Avenue
Fremont, CA 94538-3152, USA
RMA #: _____

- SIIG will ship the repaired or replaced product via Ground in the U.S. and International Economy outside of the U.S. at no cost to the customer.

About SIIG, Inc.

Founded in 1985, SIIG, Inc. is a leading manufacturer of IT connectivity solutions (including Serial ATA and Ultra ATA Controllers, FireWire, USB, and legacy I/O adapters) that bridge the connection between Desktop/ Notebook systems and external peripherals. SIIG continues to grow by adding A/V and Digital Signage connectivity solutions to our extensive portfolio. All centered around the distribution and switching of A/V signals over CAT5/6, these products include matrix switches, distribution amplifiers, extenders, converters, splitters, cabling, and more.

SIIG is the premier one-stop source of upgrades and is committed to providing high quality products while keeping economical and competitive prices. High-quality control standards are evident by one of the lowest defective return rates in the industry. Our products offer comprehensive user manuals, user-friendly features, and most products are backed by a lifetime warranty.

SIIG products can be found in many computer retail stores, mail order catalogs, and e-commerce sites in the Americas, as well as through major distributors, system integrators, and VARs.

PRODUCT NAME

DP CyberParallel Dual

FCC RULES: TESTED TO COMPLY WITH FCC PART 15, CLASS
B OPERATING ENVIRONMENT: FOR HOME OR OFFICE USE

FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE PARTY RESPONSIBLE FOR PRODUCT COMPLIANCE

SIIG, Inc.
6078 Stewart Avenue
Fremont, CA 94538-3152, USA
Phone: 510-657-8688

DP CyberParallel Dual is a trademark of SIIG, Inc. SIIG and the SIIG logo are registered trademarks of SIIG, Inc. Microsoft and Windows are registered trademarks of Microsoft Corporation. All other names used in this publication are for identification only and may be trademarks of their respective owners.